

VENEER STONE: LEDGESTONE INSTALLATION TIPS




IMPORTANT NOTE

Our Ledgestone collection has been designed to have irregular edges to give a rustic appeal. This will create small voids between some panels. We suggest you prepare the wall by ensuring the colour of the wall is similar to the stone. This can be done by tinting the glue or mortar with an oxide. Check with your local glue supplier for warranty and terms.

- Ledgestone has been designed for dry stack installation/presentation. When applying the panels keep the joints as tight as possible to retain the natural dry stone look.
- If your application requires corners to be covered, apply these first.
- After the corner pieces have been applied, apply the stone panel's 1-2 layers at a time, working towards the centre.
- Colour, size and texture variation is an essential aspect of a natural looking stone wall. Select stone from different boxes and lay out across your job site to ensure you gain this look. The visual effect will be enhanced by an overall natural mixed presentation.

Sample Installation Guide - like brick work, avoid straight vertical lines when placing the stone.

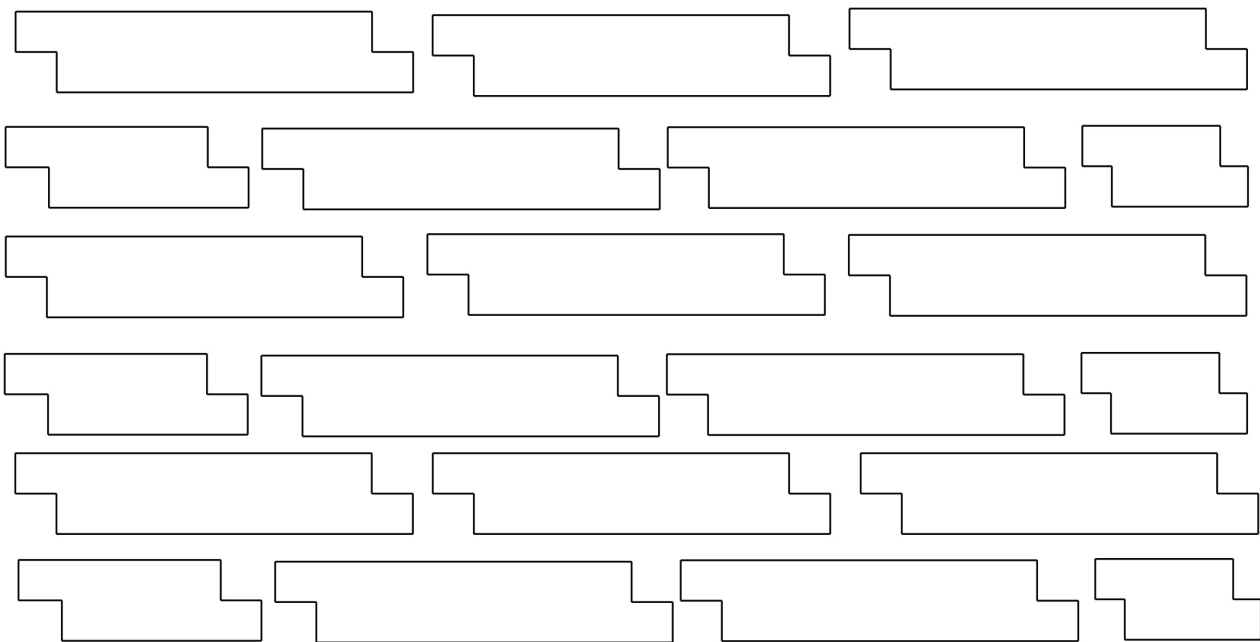

Cutting the stone panels: The stone panels can be cut or trimmed using a wet saw, hammer and bolster, wide mouth nippers or angle grinder with diamond blade attached.



To retain the original fresh quarried look, we suggest sealing the stone. If you would like the stone to mellow slightly and gain the European look after years of harsh weathering, don't seal the product.

For more information visit our website at www.australianpaving.com.au or call 1800 191 131.